

# CO<sub>2</sub>BUDDY

## Personal CO<sub>2</sub> Safety Alarm

The **CO<sub>2</sub>BUDDY** personal alarm is designed to detect carbon dioxide (CO<sub>2</sub>) and warn of any dangerous levels in confined spaces, providing continuous protection for those working in an environment where CO<sub>2</sub> is present. This extremely lightweight personal alarm can be easily clipped to a pocket or belt, or can be attached to a lanyard.

The **CO<sub>2</sub>BUDDY** is suitable for a wide variety of applications where CO<sub>2</sub> is used including pub and bar cellars, walk in coolers, fast food outlets, agricultural grow houses, medical laboratories and food packaging plants. **CO<sub>2</sub>BUDDY** ensures personal protection for delivery drivers, servicing engineers and maintenance personnel who work in multiple locations where CO<sub>2</sub> is used but is not guaranteed to be monitored by a fixed system.

Charged via a Micro USB cable, the **CO<sub>2</sub>BUDDY** is easy and convenient to keep fully powered. The **CO<sub>2</sub>BUDDY** is a robust, but lightweight safety alarm from Analox, one of the world's leading gas monitor companies with facilities in the UK and US.

Standards including EH40 in Europe and OSHA throughout the US mandate that employees should not be exposed to potentially dangerous levels of CO<sub>2</sub> as it can prove to be highly toxic in very small concentrations.

**CO<sub>2</sub>BUDDY** has two alarm levels (low and high) which are uniquely identified to the user through different audible and visual sequences. **CO<sub>2</sub>BUDDY** also monitors a time weighted average (TWA) of exposure to CO<sub>2</sub> over an eight hour period and will go into alarm if the TWA of CO<sub>2</sub> is above 0.5%.

The low and high alarm levels can easily be altered from the factory defaults by selecting from a choice of alarm configurations during commissioning of a unit.

Alarm configurations supported include 0.5% and 1.5%, 1.5% and 3.0%, 0.5% and 1.0%, 1.0% and 2.0%.

CO<sub>2</sub>

### KEY FEATURES

Lightweight - Max weight 70g

Rechargeable battery

Minimum 48 hours battery life

Single button operation

Fresh air calibration

Low maintenance

Choice of low and high alarm point configurations available

TWA Alarm

Every day, we **save lives.**

**ANALOX**  
Sensor Technology

## SYSTEM SPECIFICATIONS

Display: LCD

Power: Minimum of 48 hours of operation with low battery warning

Charging: 2 hours at 5V, 300mA


Max Dimensions: 75mm x 63mm x 34mm

IP Rating: 54

Mounting: Pocket, Belt or Lanyard

Approvals: CE, FCC

Alarm indicators: Audible, Red Strobe, Vibration

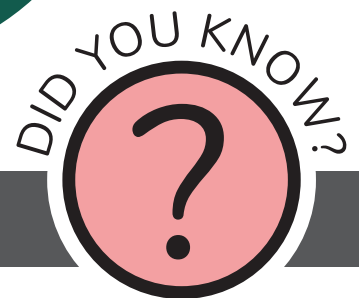

An increase as small as 0.5% of CO<sub>2</sub> can be harmful to human health. Everyday, we **save lives**.

Analox has a policy of continuous improvement and we reserve the right to upgrade or change specifications without prior notice. If you require a datasheet in another language please contact us.

[www.analoxsensortechology.com](http://www.analoxsensortechology.com)



UK & USA  
Quality Design,  
Manufacturing & Service

**ANALOX**  
Sensor Technology



# WolfLabs

**Pricing on any accessories shown can be found by keying the part number into the search box on our website.**

The specifications listed in this brochure are subject to change by the manufacturer and therefore cannot be guaranteed to be correct. If there are aspects of the specification that must be guaranteed, please provide these to our sales team so that details can be confirmed.

**[www.wolflabs.co.uk](http://www.wolflabs.co.uk)**

**Tel : 01759 301142**

**Fax : 01759 301143**

**[sales@wolflabs.co.uk](mailto:sales@wolflabs.co.uk)**

Please contact us if this literature doesn't answer all your questions.